

## Product Data Sheet

## DIAION™ SMN3

DIAION™ SMN3 is a nuclear grade mixed resin with strongly acidic cation exchange resin, DIAION™ SKN3, with <sup>7</sup>Li form, and strongly basic anion exchange resin, DIAION™ SAN1. It is used for cleanup system in primary circuit.

## Product

Grade Name	DIAION™ SMN3		
Type	Mixed		
Matrix	Styrene-DVB, Gel		
Functional Group	Sulfonic acid / Type I (trimethyl ammonium groups)		
Ionic Form	<sup>7</sup> Li <sup>+</sup> / OH <sup>-</sup>		
Chemical Equivalent Ratio	1 / 1		

## Specification

Component		Cation Exchange Resin		Anion Exchange Resin	
		DIAION™ SKN3		DIAION™ SAN1	
Salt Splitting Capacity	meq/mL	1.6 min.		1.0 min.	
Particle Size Distribution 425 - 1180 μm	%	95 min.		95 min.	
Particle Size Distribution thr. 425 μm	%	1.0 max.		1.0 max.	
Ionic Form Conversion Li Form	eq%	99 min.		-	
Ionic Form Conversion Na Form	eq%	0.1 max.		-	
Ionic Form Conversion OH Form	eq%	-		90 min.	
Ionic Form Conversion CO <sub>3</sub> Form	eq%	-		10 max.	
Ionic Form Conversion Cl Form	eq%	-		0.2 max.	
Metal Content (Ca)	mg/L	50 max.		50 max.	
Metal Content (Pb)	mg/L	10 max.		10 max.	
Metal Content (Fe)	mg/L	50 max.		-	
Metal Content (Cu)	mg/L	10 max.		-	
Water Extractables	g/L-R	0.5 max.		0.1 max.	

## Typical Properties

Component		Mixed Resin
Shipping Density	g/L	720

## Recommended Operating Conditions

Maximum Operating Temperature	°C	60
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60

### Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ SMN3 resin in normal down flow operation is shown in the graphs below.

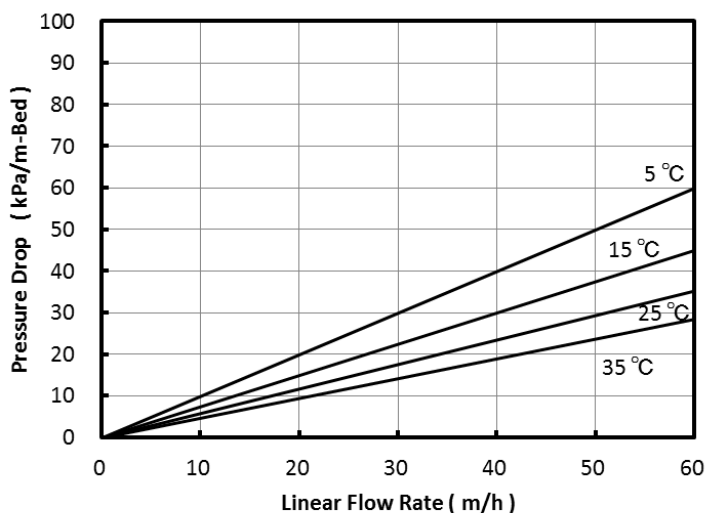


Fig. 1 Pressure Drop of SMN3

### Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.