

Product Data Sheet

DIAION™ WA30C

DIAION™ WA30C is a highly porous type weakly basic anion exchange resin. It has tertiary amine functionality and low-leachable properties compared with DIAION™ WA30. A wide range of applications, especially in a field of higher purity water treatment application, is recommended.

Product

| | | |
|------------------|----------------------------|--|
| Grade Name | DIAION™ WA30C | |
| Type | Weak Base Anion | |
| Matrix | Styrene-DVB, Highly Porous | |
| Functional Group | Tertiary Amine | |
| Ionic Form | Free Base | |

Specification

| | | |
|--|--------|-----------|
| Whole Bead Count | - | 95 min. |
| Total Exchange Capacity | meq/mL | 1.5 min. |
| Water Content | % | 43 - 55 |
| Particle Size Distribution on 1180 µm | % | 5 max. |
| Particle Size Distribution thr. 300 µm | % | 1 max. |
| Effective Size | mm | 0.40 min. |
| Uniformity Coefficient | - | 1.6 max. |
| COD | ppm | 5 max. |

Typical Properties

| | | |
|---|------|------|
| Shipping Density | g/L | 650 |
| Mean Particle Size | µm | 700 |
| Particle Density | g/mL | 1.05 |
| Total Swelling (FB to Cl ⁻) | % | 23 |

Recommended Operating Conditions

| | | |
|-------------------------------|-----------------|------------|
| Maximum Operating Temperature | °C | 100 |
| Operating pH Range | | 0 - 9 |
| Minimum Bed Depth | mm | 800 |
| Service Flow Rate | m/h | 10 - 40 |
| Regenerant | | NaOH |
| Regenerant Concentration | % | NaOH 1 - 4 |
| Regenerant Level | % of ionic load | 120 |
| Regenerant Flow Rate | m/h | 2 - 6 |
| Total Rinse Requirement | BV | 5 - 10 |

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ WA30C resin in normal down flow operation is shown in the graphs below.

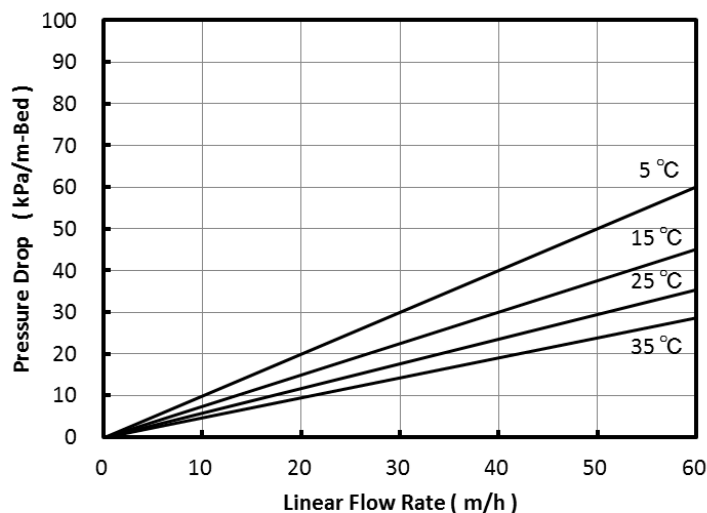


Fig. 1 Pressure Drop of WA30C

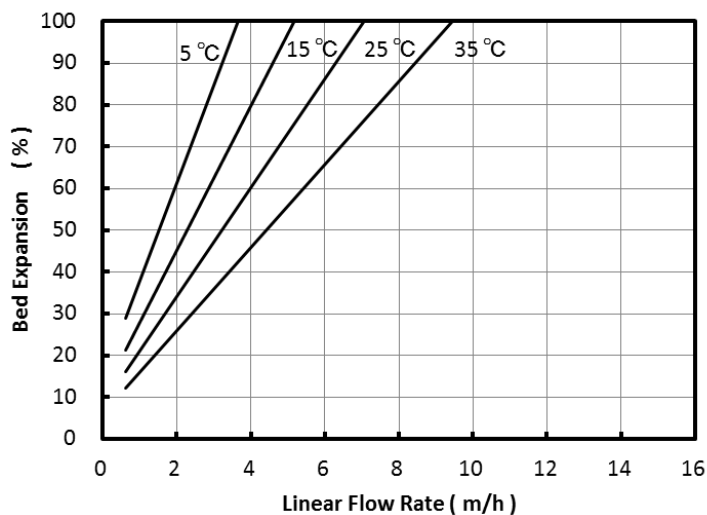


Fig. 2 Bed Expansion of WA30C

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.