

Product Data Sheet

DIAION™ RCP145H

DIAION™ RCP145H is a modified highly porous type strongly acidic cation exchange resin. It has resistivity for higher temperature. It is recommended for catalysts applications.

Product

Grade Name	DIAION™ RCP145H	
Type	Strong Acid Cation	
Matrix	Modified Styrene-DVB, Porous	
Functional Group	Sulfonic Acid	
Ionic Form	H ⁺	

Specification

Whole Bead Count	-	95 min.
Salt Splitting Capacity	meq/mL	0.8 min.
Water Content	%	61 - 71
Particle Size Distribution on 1180 μm	%	5 max.
Particle Size Distribution thr. 300 μm	%	1 max.
Effective Size	mm	0.40 min.
Uniformity Coefficient	-	1.6 max.
Ionic Form Conversion H Form	eq%	95 min.

Typical Properties

Shipping Density	g/L	740
Mean Particle Size	μm	680
Particle Density	g/mL	1.22
Total Swelling (Na ⁺ to H ⁺)	%	5

Recommended Operating Conditions

Maximum Operating Temperature	°C	150
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60
Regenerant		HCl H ₂ SO ₄
Regenerant Concentration	%	HCl 4 - 10 H ₂ SO ₄ 1 - 4
Regenerant Level	g/L	50 - 200
Regenerant Flow Rate	m/h	2 - 10
Total Rinse Requirement	BV	2 - 10

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ RCP145H resin in normal down flow operation is shown in the graphs below.

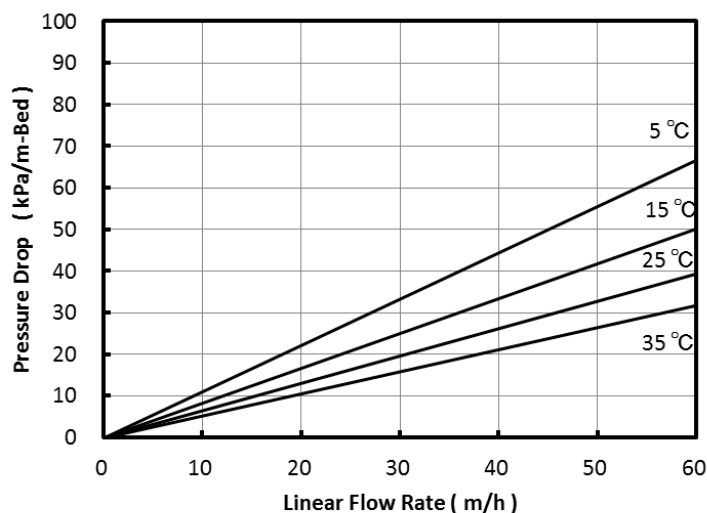


Fig. 1 Pressure Drop of RCP145H

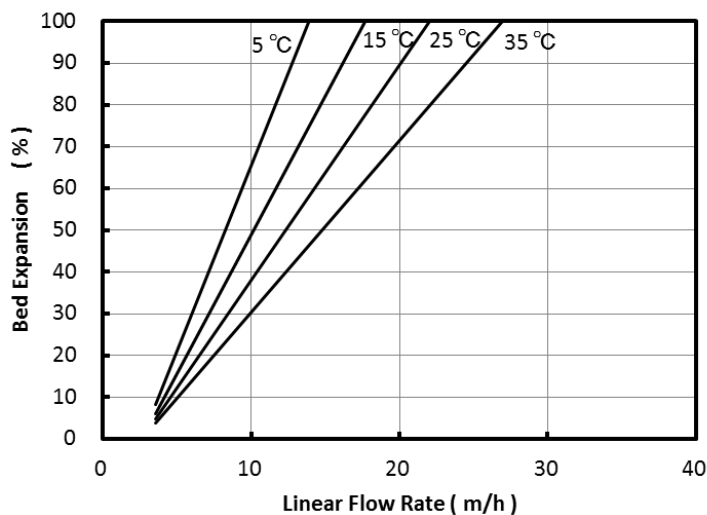


Fig. 2 Bed Expansion of RCP145H

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.