

## Product Data Sheet

## DIAION™ UBK10

DIAION™ UBK10 is a cation exchange resin with a uniform particle size. It has 10% cross-linkages and excellent properties. A wide range of applications, especially in a field of manufacturing and processing pure water, is recommended.

## Product

Grade Name	DIAION™ UBK10	
Type	Strong Acid Cation	
Matrix	Styrene-DVB, Gel	
Functional Group	Sulfonic acid	
Ionic Form	Na <sup>+</sup>	

## Specification

Whole Bead Count	-	90 min.
Salt Splitting Capacity	meq/mL	2.2 min.
Water Content	%	38 - 44
Mean Particle Size	μm	650 ± 50
Uniformity Coefficient	-	1.10 max.

## Typical Properties


Shipping Density	g/L	850
Particle Density	g/mL	1.32
Total Swelling (Na <sup>+</sup> to H <sup>+</sup> )	%	8

## Recommended Operating Conditions


Maximum Operating Temperature	°C	120
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 40
Regenerant		HCl H <sub>2</sub> SO <sub>4</sub>
Regenerant Concentration	%	HCl 4 - 10 H <sub>2</sub> SO <sub>4</sub> 1 - 4
Regenerant Level	g/L	30 - 150
Regenerant Flow Rate	m/h	2 - 10
Total Rinse Requirement	BV	2 - 10

### Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ UBK10 resin in normal down flow operation is shown in the graphs below.

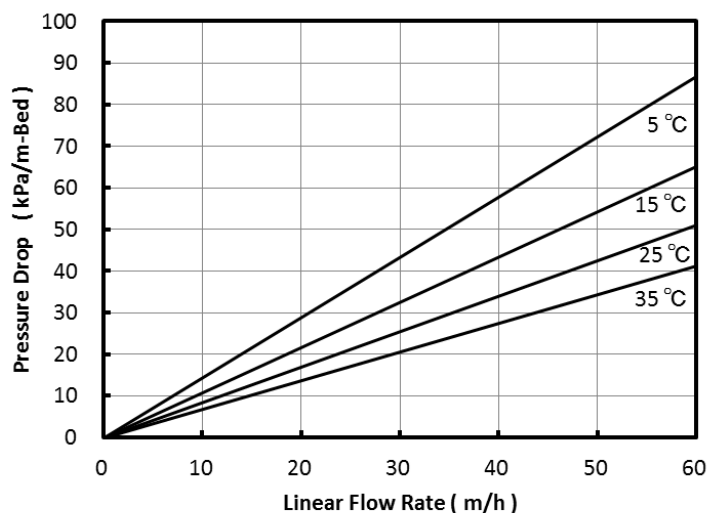


**Fig. 1 Pressure Drop of UBK10**

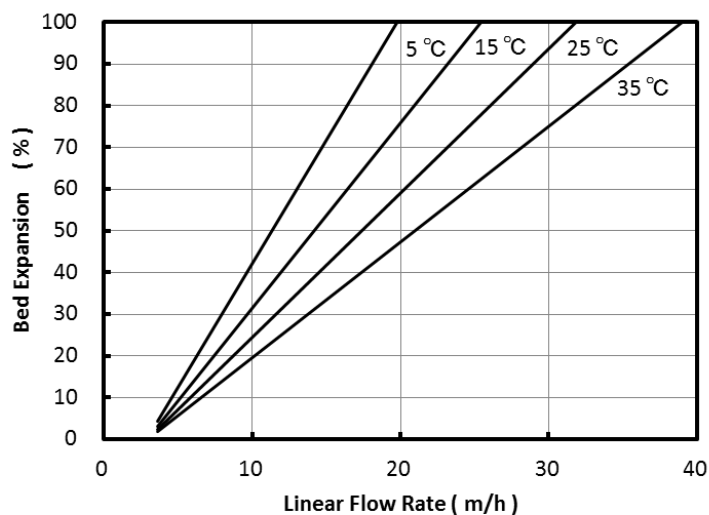

**Fig. 2 Bed Expansion of UBK10**

### Operational Capacity Data

---

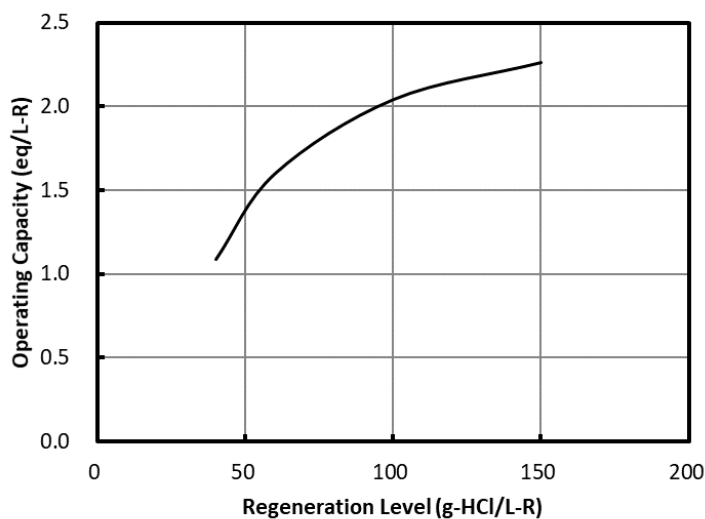

**Fig. 3 Operational Capacity Data of UBK10**  
Regenerant : 4 % HCl

### Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.