

Product Data Sheet

DIAION™ UBK12

DIAION™ UBK12 is a cation exchange resin with a uniform particle size. It has 12% cross-linkages and excellent properties. A wide range of applications, especially in a field of manufacturing and processing pure water, is recommended.

Product

Grade Name	DIAION™ UBK12	
Type	Strong Acid Cation	
Matrix	Styrene-DVB, Gel	
Functional Group	Sulfonic acid	
Ionic Form	Na ⁺	

Specification

Whole Bead Count	-	90 min.
Salt Splitting Capacity	meq/mL	2.3 min.
Water Content	%	33 - 39
Mean Particle Size	μm	650 ± 50
Uniformity Coefficient	-	1.2 max.

Typical Properties

Shipping Density	g/L	850
Particle Density	g/mL	1.34
Total Swelling (Na ⁺ to H ⁺)	%	6

Recommended Operating Conditions

Maximum Operating Temperature	°C	120
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 40
Regenerant		HCl H ₂ SO ₄
Regenerant Concentration	%	HCl 4 - 10 H ₂ SO ₄ 1 - 4
Regenerant Level	g/L	30 - 150
Regenerant Flow Rate	m/h	2 - 10
Total Rinse Requirement	BV	2 - 10

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ UBK12 resin in normal down flow operation is shown in the graphs below.

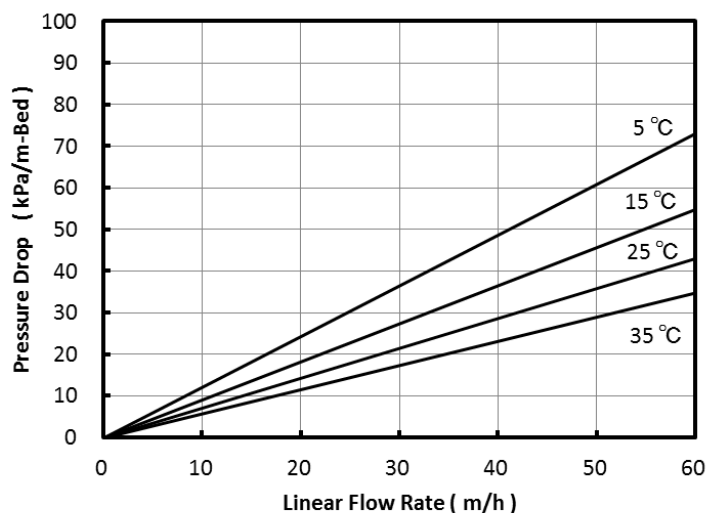


Fig. 1 Pressure Drop of UBK12

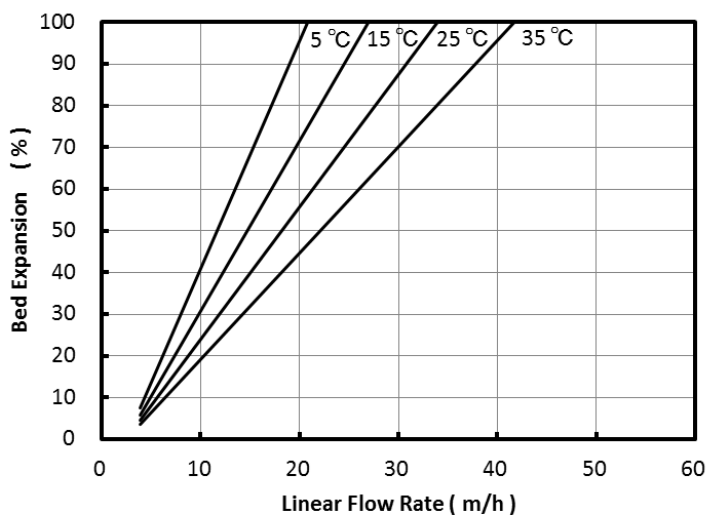


Fig. 2 Bed Expansion of UBK12

Operational Capacity Data

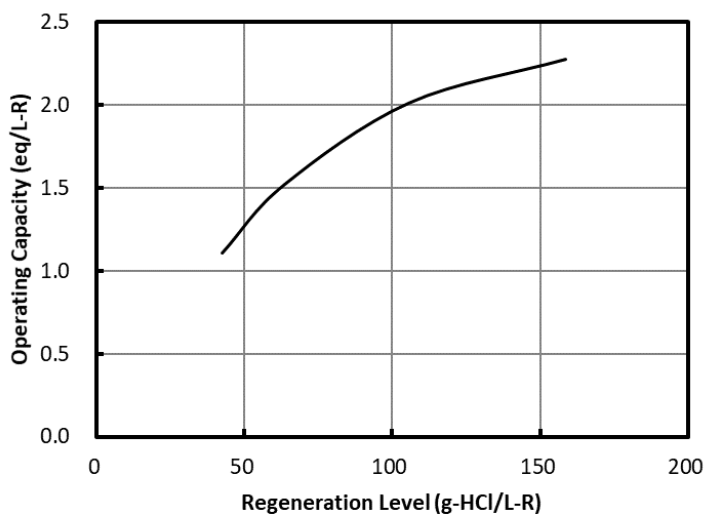


Fig. 3 Operational Capacity Data of UBK12
Regenerant : 4 % HCl

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.